



TILTING RACK BRACKET

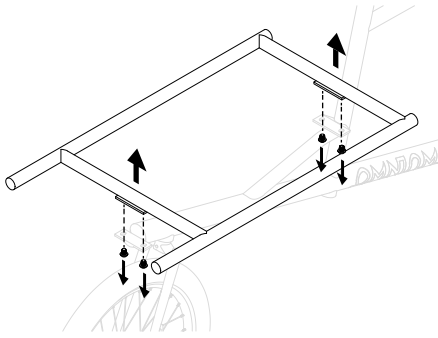


1. DETACH THE RACK

- Locate the four M10 bolts underneath the rack.
- Unscrew the four M10 bolts to detach the rack.
- Remove the rack from the frame.

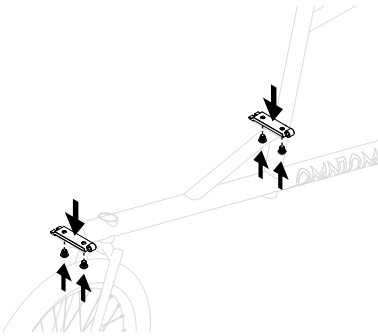


2. INSTALL BOTTOM COMPONENTS

- Locate the two bottom components and the four M10 socket head bolts.

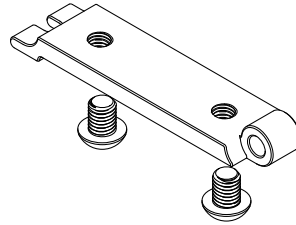

- Attach these components to the rack mounting plates on the frame, screwing in the M10 bolts loosely.


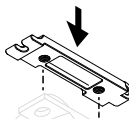


IMPORTANT

Mind the direction of the bottom components.

3. INSTALL TOP COMPONENTS



- Identify the two top components and the four countersunk M10 bolts.

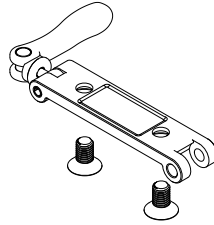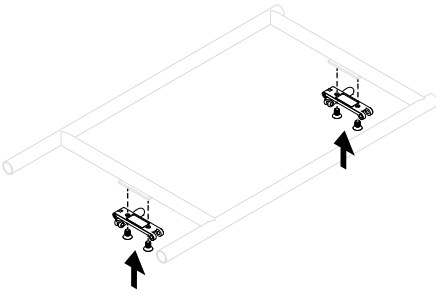

- Align the flat surface of the components with the mounting plate on the rack and screw in the countersunk bolts, tightening them to 8-10 Nm.

4. ALIGN

- Align the tilting rack bracket's two components.
- Insert the security pin. You can choose the direction of the pin.
- Wiggle the rack between 0-90° a few times.

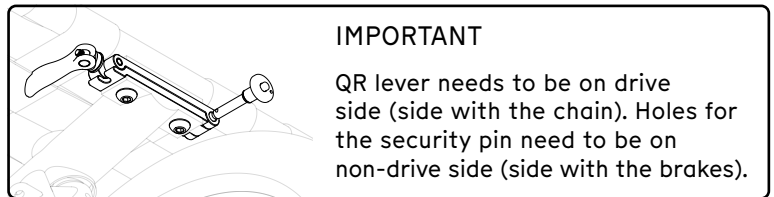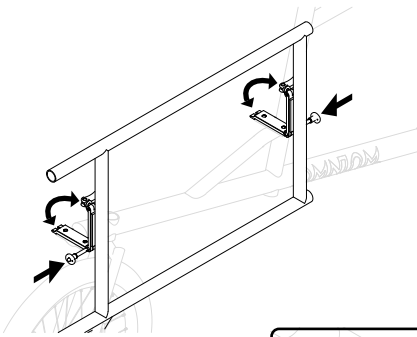

5. SECURE

- Lower the rack to the normal position and clamp the QR lever between the two components.
- Tighten the four M10 socket head bolts to 8-10 Nm.

